Cuisinart®

INSTRUCTION BOOKLET

Coffee Bar™ Coffee Grinder **DCG-20 Series**

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. **Read all instructions.**
2. To protect against risk of electrical shock, do not immerse cord, plug or grinder in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, before removing coffee and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized Cuisinart® service facility for examination, repair, or mechanical or electrical adjustment.
7. The use of attachments not recommended or sold by Cuisinart may cause fire, electrical shock, or risk of injury.
8. Do not use outdoors.
9. Do not let cord hand over edge of table or counter, or touch hot surfaces.
10. Check hopper for presence of foreign objects before using.
11. Use this appliance to grind roasted coffee beans only. Grinding other substances, such as nuts, spices or unroasted beans may dull the blade and cause poor grinding or injury.
12. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet**. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS

NOTICE:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

OPERATING INSTRUCTIONS

1. Plug cord into outlet.
2. Remove lid from base of grinder.
3. Fill stainless steel bowl with desired quantity of beans (see measurement suggestions on reverse.) For best results, do not fill beans above the top of the stainless steel bowl.
4. Place the lid onto grinder base.
5. Press and hold On/Off button to begin grinding. Please note: A safety feature of this grinder requires that the grinder will not operate unless the lid is in place.
6. Grind until beans are ground to desired consistency (see grinding suggestions on reverse.) To stop grinding, release pressure from On/Off button.
7. Remove plug from outlet.
8. Measure ground coffee into coffeemaker filter using scoop (not included), tablespoon or lid measurement markings. See measurement suggestions on reverse.

FOR HOUSEHOLD USE ONLY

GRINDING SUGGESTIONS:

Some general guidelines for grinding are listed below. However, times will vary depending upon the amount and type of coffee used and your personal preference. The best way to determine how coarse or fine to grind your coffee is to experiment with different grinds and coffee types to suit your taste.

GRIND	SUGGESTED USE	GRIND TIME
Coarse	Percolator/ French Press	10 Seconds
Medium	Automatic Drip	20 Seconds
Fine	Espresso	30 Seconds

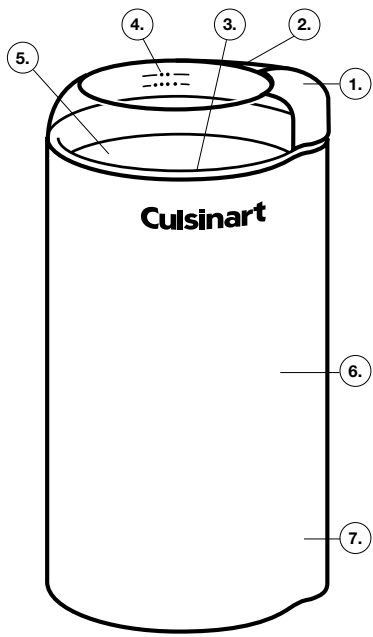

1. On/Off Button
2. Lid
3. Stainless Steel Blades
4. Measurement Markings
5. Stainless Steel Bowl
6. Grinder Base
7. Cord Storage
8. **BPA-Free (not shown)** All parts that come in contact with coffee are BPA-Free

MEASUREMENT SUGGESTIONS:

For the richest coffee flavor, we suggest using one and one-half (1½) rounded tablespoons of ground coffee for every 5 ounces of water. If you have a Cuisinart® Coffeemaker, the cups are measured in 5-ounce increments.

The measurement markings on the lid indicate reference measurements.

For example, for automatic drip coffee, if you fill the lid to the •••• marking with whole beans, you will have enough ground coffee to reach the •• marking. This equals enough ground coffee for two 5-oz. cups, using the Cuisinart® recipe.

Note: These markings are approximate. Experiment with different quantities to determine what works best for you.

CLEANING, STORAGE AND MAINTENANCE INSTRUCTIONS

1. Be sure that grinder plug has been removed from outlet.
2. Wipe inside of stainless steel bowl and lid with damp paper towel. Dry completely.
   If desired, lid may be washed in warm water or in the top rack of a dishwasher. **Never immerse the grinder base unit in water or other liquid.**
3. Store excess cord by pressing a section at a time into the cord storage area in the base of the unit.
4. **Maintenance**: Any other servicing should be preformed by an authorized service representative.

© 2014 Cuisinart
150 Milford Road
East Windsor, NJ 08520

Printed in China.

13CE144442

IB-3714-ESP

WARRANTY:

The Cuisinart® Coffee Bar™ Coffee Grinder carries an 18-month Limited Warranty. This warranty supersedes all previous warranties on the Cuisinart® Coffee Grinder.

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Coffee Bar™ Coffee Grinder that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Coffee Bar™ Coffee Grinder will be free of defects in material or workmanship under normal home use for three years from the date of original purchase.

We recommend that you visit our website, **www.cuisinart.com** for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your coffee grinder should prove to be defective within the warranty period, we will repair it (or, if we think it necessary, replace it) without charge to you. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190 or write to:

Cuisinart 7475 North Glen Harbor Blvd. Glendale, AZ 85307

To facilitate the speed and accuracy of your return, please also enclose $10.00 for shipping and handling of the product (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions). Please also be sure to include a return address, description of the product defect, product serial number, and any other information pertinent to the product's return. Please pay by check or money order.

NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

Your Cuisinart® Coffee Bar™ Coffee Grinder has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If either of the above two options does not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

Cuisinart®

MANUAL DE INSTRUCCIONES

Molinillo de café Coffee Bar™ **Serie DCG-20**

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

1. **Lea todas las instrucciones.**
2. Para reducir el riesgo de electrocución, no sumerja el cable, la clavija o el cuerpo del aparato en agua u otro líquido.
3. Supervise el uso de este aparato cuidadosamente cuando esté usado por o cerca de niños.
4. Desconecte el aparato cuando no esté en uso, antes de instalar o remover piezas, antes de vaciar el café molido y antes de limpiarlo.
5. Evite el contacto con las piezas móviles.
6. No utilice este aparato si el cable o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.
7. El uso de accesorios no recomendados por Cuisinart presenta un riesgo de incendio, electrocución o herida.
8. No lo utilice en exteriores.
9. No permita que el cable cuelgue del borde de la encimera o de la mesa, ni que haga contacto con superficies calientes.
10. Averigüe que no hay objetos extraños en la tolva antes de usarlo.
11. Utilice el molinillo solamente para moler café tostado en grano. No lo use para moler nueces, especias o café crudo. Esto podría dañar las cuchillas o provocar heridas.
12. No haga funcionar el aparato bajo o adentro de un armario. **Siempre desconecte el aparato antes de**

guardarlo en un armario. Dejar el aparato conectado presenta un riesgo de incendio, especialmente si éste toca las paredes o la puerta del armario cuando cierra.

GUARDE ESTAS INSTRUCCIONES

AVISO:

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entrara en la toma de corriente, inviértela. Si aún no entrara completamente, comuníquese con un electricista. No intente modificarla.

INSTRUCCIONES DE OPERACIÓN

1. Conecte el cable a la toma de corriente.
2. Retire la tapa de la base.
3. Coloque la cantidad deseada de café en grano en el tazón de acero inoxidable (véase la sección "proporciones" al dorso). Para lograr mejores resultados, no llene el tazón más arriba de la orilla del mismo.
4. Cierre la tapa.
5. Presione y mantenga oprimido el botón de encendido/apagado para empezar a moler. Nota: Como medida de seguridad, el aparato no se pondrá en marcha a menos que la tapa esté debidamente cerrada.
6. Muela los granos hasta obtener la consistencia deseada (véase las sugestiones al dorso). Para apagar, suelte el botón de encendido/apagado.
7. Desconecte el cable de la toma de corriente.
8. Mida la cantidad deseada de café molido con una cuchara (no incluida) o las medidas sobre la tapa, y échelo en el filtro. Véase la sección "Proporciones" al dorso.

PARA USO DOMÉSTICO SOLAMENTE

MOLIENDA

A continuación encontrará algunas sugestiones acerca de cómo moler café. Tenga presente que el tiempo requerido depende de la cantidad y del tipo de café, y de sus preferencias. Haga algunas pruebas con varios tipos de café y distintos grados de molienda hasta encontrar la consistencia que mejor le conviene.

MOLIENDA	USO SUGERIDO	TIEMPO*
Gruesa	Percolador/Prensa francesa	10 segundos
Media	Cafetera eléctrica	20 segundos
Fina	Cafetera expreso	30 segundos

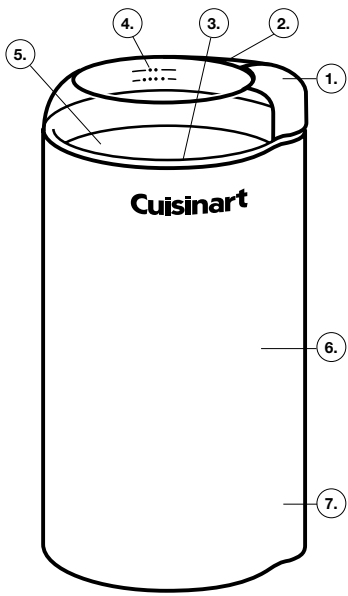

1. **Botón de encendido/ apagado**
2. **Tapa**
3. **Cuchillas de acero inoxidable**
4. **Marcas de medida**
5. **Tazón de acero inoxidable removible**
6. **Base**
7. **Espacio para guardar el cable**
8. **Sin BPA** (no ilustrado) Ninguna de las piezas en contacto con los alimentos contiene bisfenol A (BPA).

PROPORCIONES

Para un sabor intenso, le recomendamos que use 1½ cucharada llena de café molido por 5 onzas (145 ml) de agua. Si su cafetera es una cafetera Cuisinart®, las tazas aparecen en incremento de 5 onzas (145 ml).

Encontrará las proporciones sobre la tapa.

Por ejemplo, para preparar café con una cafetera eléctrica, llene el tazón hasta la marca ••••; conseguirá café molido hasta la marca ••. Esto es suficiente para dos tazas de 5 onzas (145 ml), usando la receta de Cuisinart®.

Nota: Estas medidas son aproximadas. Haga algunas pruebas con varias cantidades para determinar lo que mejor le conviene.

LIMPIEZA, ALMACENAJE Y MANTENIMIENTO

1. Desconecte el aparato antes de limpiarlo.
2. Limpie el interior del tazón de acero inoxidable con una toalla de papel humedecida. Seque bien.
   Si desea, lave la tapa en agua jabonosa tibia, o en la bandeja superior del lavavajillas. **No sumerja la base del aparato en agua u otro líquido.**
3. Guarde el exceso de cable en el espacio debajo de la base, empujando el cable poco a poco.
4. **Mantenimiento**: Cualquier otro servicio debe ser realizado por un técnico autorizado.

GARANTÍA

Cuisinart ofrece una garantía limitada de 18 meses sobre este aparato. Esta garantía reemplaza todas las demás declaraciones expresas de garantía. Esta garantía es para los consumidores solamente. Usted es un consumidor si ha comprado su aparato Cuisinart® en una tienda, para uso personal o casero. A excepción de los estados donde la ley lo permita, esta garantía no es para los detallistas u otros comerciantes. Cuisinart garantiza este aparato contra todo defecto de materiales o fabricación durante 3 años después de la fecha de compra original, siempre que el aparato haya sido utilizado para uso doméstico y según las instrucciones. Le aconsejamos que llene el formulario de registro disponible en www.cuisinart.com a fin de facilitar la verificación de la fecha de compra original. Sin embargo, registrar el producto no es necesario para recibir servicio bajo esta garantía. En ausencia del recibo de compra, el período de garantía será calculado a partir de la fecha de fabricación.

Si este aparato presentara algún defecto de materiales o fabricación durante el período de garantía, la reparemos o reemplazaremos (a nuestra opción). Para obtener servicio bajo esta garantía, llame a nuestra línea directa gratuita al 1-800-726-0190 o regrese el aparato defectuoso a: Cuisinart 7475 North Glen Harbor Blvd. Glendale, AZ 85307
Regrese el aparato defectuoso, junto con su recibo de compra y un cheque o giro postal de US$10.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-726-0190 para recibir instrucciones de envío. Recuerde incluir su nombre, dirección y teléfono, la descripción del problema, así como cualquier información pertinente. Sentimos no poder aceptar otras formas de pago.
NOTA: Para mayor seguridad, le aconsejamos que mande su paquete por un método de entrega con seguro y seguimiento. Cuisinart no será responsable por los daños ocurridos durante el transporte o por los paquetes mandados a una dirección equivocada. Los productos perdidos y/o lastimados durante el envío no serán cubiertos bajo esta garantía. Este aparato satisface las más altas exigencias de fabricación y ha sido diseñado para uso sobre corriente de 120V, usando accesorios y piezas de repuesto autorizados solamente. Esta garantía excluye expresamente los daños causados por accesorios, piezas o reparaciones no autorizados por Cuisinart, así como los daños causados por el uso de un convertidor de voltaje. Esta garantía no cubre el uso institucional o comercial del producto, y no es válida en caso de daños causados por mal uso, negligencia o accidente. Esta garantía excluye expresamente todos los daños incidentales o consecuentes. Algunos Estados no permiten la exclusión o limitación de daños incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Usted puede tener otros derechos que varían de un Estado a otro.

RESIDENTES DE CALIFORNIA SOLAMENTE
La ley del estado de California ofrece dos opciones bajo el período de garantía. Los residentes del estado de California pueden (A) regresar el producto defectuoso a la tienda donde lo compraron o (B) a otra tienda que venda productos Cuisinart® de este tipo. La tienda, a su opción, reparará el producto, referirá el consumidor a un centro de servicio independiente, cambiará el producto o reembolsará el consumidor por el precio original del producto, menos la cantidad imputable al uso del producto por el consumidor hasta que éste se dañe. Si estas dos opciones no satisfacen al consumidor, podrá llevar el aparato a un centro de servicio independiente, siempre que se pueda ajustar o reparar el aparato de manera económica. Cuisinart será responsable por los gastos de servicio, reparación, reemplazo o reembolso de los productos defectuosos durante el período de garantía.
Los residentes de California también pueden, si lo desean, mandar el aparato defectuoso directamente a Cuisinart para que lo reparen o lo cambien. Para esto, se debe llamar a nuestro servicio posventa al 1-800-726-0190. Cuisinart será responsable por los gastos de reparación, reemplazo, manejo y envío de los productos defectuosos durante el período de garantía.

© 2014 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Impreso en la China

13CE144442

IB-3714-ESP